

# **Cavity Pressure Sensor**

# with front ø1 mm

Miniaturized piezoelectric sensor with single-wire technology for mold cavity pressures up to 2000 bar in the injection molding of plastics.

- Ideally suited for industrial applications
- Designed without a diaphragm and with a level, machinable front face
- Also available with TiCN coated face for abrasive plastics
- Exchangeable cable
- With unified sensitivity
- · IP67 protected

#### Description

The cavity pressure sensor Type 6183D ... is a direct measuring piezoelectric sensor with a front surface of 1 mm diameter. Its front surface is installed with contact to the melt. For abrasive melts (glass fibers etc.) a TiCN coated version is offered. On the uncoated versions, the front can be machined up to 0,5 mm to be flush with the cavity wall contour. For these types there is the possibility to mount a keyway pin to prevent the sensor from rotating in the mounting bore. Type 6183D... is delivered with unified sensitivity. The maximum deviations of the sensitivities are  $\pm$  3% of the nominal sensitivity (2,25 pC/ bar). This simplifies the interchangeability of sensors, as the nominal sensitivity can be used. All versions with replaceable cable are IP67 protected. Type 6183D... is available in several different mounting styles as well as different cable types, so that an easy and flexible integration in each mold environment can be achived. See page 3.


The pressure acts over the entire front of the sensor and is transmitted to the measuring element, which produces a proportional electric charge (pC = Picocoloumb). This is converted into a voltage 0 ... 10 V in the amplifier and is then available as an amplifier output.

#### **Application**

It is mainly suitable for industrial applications for monitoring and open-looped and closed-looped control in thermoplastic injection molding.



Type 6183D...

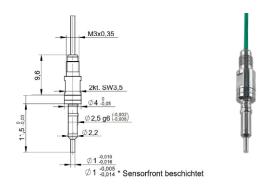


#### Technical data

bar	0 2 000
bar	2 500
pC/bar	≈-2,25
% FSO	≤±1
°C	0 200*
°C	<450
ΤΩ	>10
ΤΩ	>1
	bar pC/bar % FSO °C °C

\* During machine down-time, the mold temperature may be allowed to rise to 240 °C without damaging the sensor. However, measuring errors may occur



# Cable and amplifier for measuring chains with sensor Type 6183D

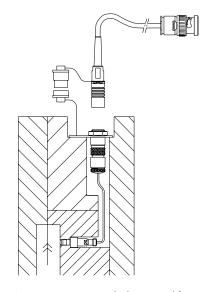



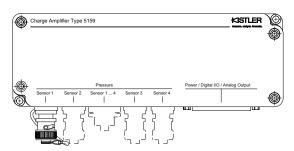


Fig. 1: Sensor Type 6183D with charge amplifier Type 5159A

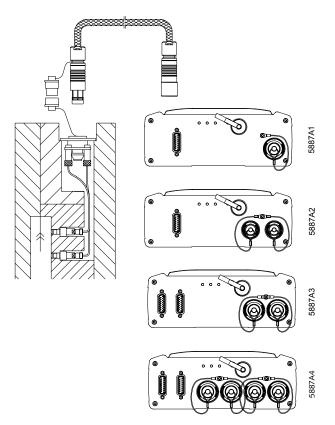

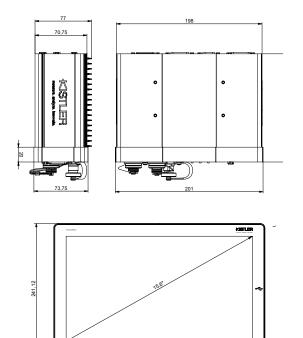


4-channel cable Type 1995A on connector Type 1722A4	8-channel cable Type 1997A on connector Type 1722A8
Type 5887A1	Type 5887A2
	Type 5887A3
	Type 5887A4

Fig. 2: Sensor Type 6183D with ComoNeo monitoring system ComoNeo Typ 5887...

Page 2/7



#### Sensor variants

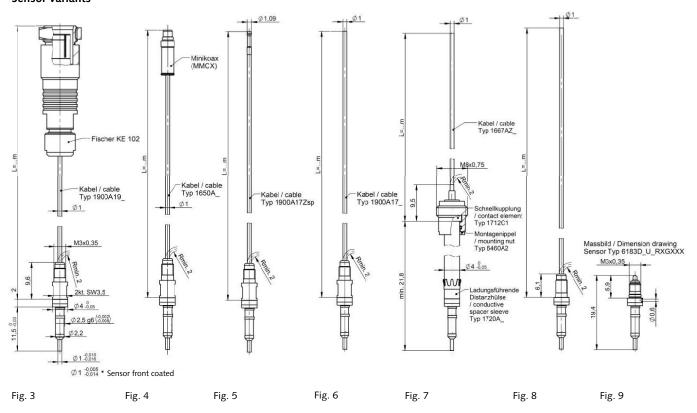

**Fig. 3: Pressure sensor Type 6183D ... with coaxial cable**Sensor including replaceable coaxial cable and 1 channel
Fischer connector (Cable K and connector F).

# Fig. 4: Pressure sensor Type 6183D ... with coaxial cable and MiniKoax connector.

This variant allows connection to the multichannel connector Type 1722A...MB with coaxial cables and MiniCoax connectors. The cable is interchangeable (Cable K and connector M).

# Fig. 5: Pressure sensor Type 6183D... with Single-Wire cable and crimppin

Option of the sensor with replaceable single-wire cable and a crimppin for the connection to the contact elements Type 1712... and 1714.... The contact elements allow the use of interchangeable mold inserts or simplify the disassembly during tool maintenance processes (Cable S, connector G and cable design Zsp).

## Fig. 6: Pressure sensor Type 6183D... with single-wire cable

This version allows the connection to the multi-channel connector Type 1722A... with single-wire cable technology. The Single-Wire cable has a very small cross-section and can be routed flexibly in the injection molding tool. The cable is replaceable and can be cut to any length or repaired. With the single-wire technique, the electrical shielding is ensured by the mold steel. For the connection to Type 1722A... the sensor is ordered without connector, but is also optionally available with 1-channel connector Type 1839 (Cable S and Connector E or G).

# Fig. 7: Pressure sensor Type 6183D... with charge conducting spacer sleeve

The variants with charge conducting spacer sleeves are ideal for tools with exchangeable mold inserts, since the sensor can be easily replaced without having to loosen the wiring. But even a flexible tool concept or easier maintenance can be achieved with this mounting and connection style (Mounting N or L).



## Fig. 8: Pressure sensor Type 6183D... with integrated Single-Wire cable

The variants with integrated Single-Wire cable are aimed at customers who need a 1:1 replacement for the sensors 6183A... or B.... The slightly shorter installation length allows installation in very short mold inserts. If there is enough space, an old Type 6183A... or B... sensor can be replaced by a new Type 6183D... sensor with replaceable cable. For this purpose, only the spacer sleeve must be shortened. However, if Type

6183A... or B... is to be fitted with mounting nut Type 6460A1, this version is to be preferred (Sensor X or Y, cable S and connector G or E).

## Fig. 9: Pressure sensor Type 6183D ... without cable

This version serves as a replacement sensor. No cable or other accessories are supplied except the spacer sleeve, the calibration certificate and the identification label (Only sensor freely selectable, 6183D...SRXGXXX).

#### Mounting examples

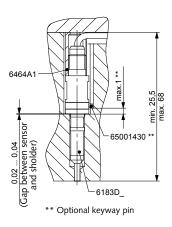


Fig. 10: Installation Type 6183D...USR... with spacer sleeve

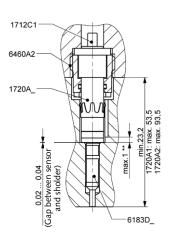


Fig. 11: Installation Type 6183D...UNR... resp. Type 6183D...ULR... with charge conducting spacer sleeve

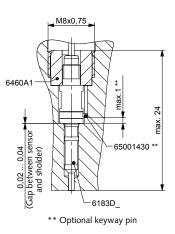


Fig. 12: Installation Type 6183D...UMR... with mounting nut

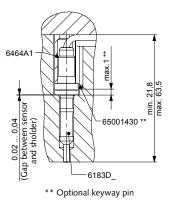


Fig. 13: Installation of Type 6183DXUSRS... or 6183DYUSRS... with spacer sleeve

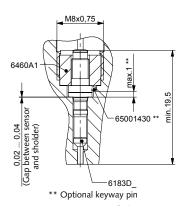


Fig. 14: Installation of Type 6183DXUSRS... or 6183DYUSRS... with mounting nut



## Mounting bore

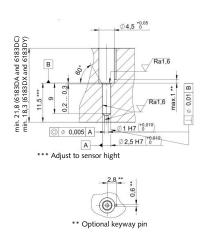


Fig. 15: Mounting bore for installation with spacer sleeve.

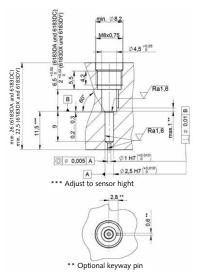


Fig. 16: Mounting bore for installation with mounting nut

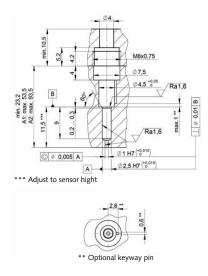


Fig. 17: Mounting bore for installation with charge conducting spacer sleeve

#### Installation

The sensor is preferably fitted in the mounting bore with the spacer sleeve (Type 6464A1). It can also be installed with mounting nut (Type 6460A1) or charge conducting spacer sleeve (Type 1720A1 or 1720A2). In case of installation with a keyway pin, however, the mounting nut Type 6460A1 should be used.

The front face of the sensor forms part of the cavity wall. The sensor must therefore be installed in such a way that its front face is exactly flush with the wall. The front of the uncoated version can be reworked up to 0,5 mm. The coated version must not be machined, otherwise the coating is removed.

When using the Single-Wire cable it must be taken care of that the whole cable including the connector is routed only in the mold or metalic housing and not outside of it. The mold steel serves as a shield for the cable. The Single-Wire cable can easily be shortened or repaired and can be routed to smallest bores and channels. It can be connected to the multi-channel connector Type 1722A... or the single channel Fischer connector Type 1839. For both connections the isolation on the end of the cable must not be stripped. Coaxial cables must be ordered in the right length. All cables should be protected from mechanical damage by a cover plate.

Keyway pin

• Sensor tester



Accessories	Mat. Nr./Type	Multichannel connectors and contact elements		
• Sensor	6183D	<ul> <li>4-channel connector up to 120 °C</li> </ul>	1722A4	
Identification plate		(for MiniCoax and single-wire cable)		
Checking tool	65000144	<ul> <li>8-channel connector up to 120 °C</li> </ul>	1722A8	
		(for MiniCoax and single-wire cable)		
Accessories according to selected variant		<ul> <li>4-channel connector up to 200 °C</li> </ul>	1708	
Type of mounting		(for single-wire cable)		
<ul> <li>Mounting nut</li> </ul>	6460A1	<ul> <li>8-channel connector up to 200 °C</li> </ul>	1710	
<ul> <li>Spacer sleeve (L = 50 mm)</li> </ul>	6464A1	(for single-wire cable)		
<ul> <li>Conducting spacer sleeve L = 40 mm</li> </ul>	1720A1	<ul> <li>Contact elements 1-channel</li> </ul>	1712	
<ul> <li>Conducting spacer sleeve L = 80 mm</li> </ul>	1720A2	for single-wire types		
<ul> <li>Mounting nut for contact element Type</li> </ul>	6460A2	<ul> <li>Contact elements 4-channel</li> </ul>	1714	
1712C1 with charge conducting spacer sle	eve	for single-wire types		
		<ul> <li>Crimpset with tools</li> </ul>	1381A0	
Cable and connectors		(Mounting of crimp pin Type 1700A41 or		
<ul> <li>Single-Wire cable with M3 connector</li> </ul>	1900A17L	2241A for connection to Types 1712		
L = 1,5/5,0 m		and 1714)		
<ul> <li>Single-Wire cable with M3 connector</li> </ul>	1900A17Zsp			
and crimp pin Type 1700A41 pre-installed				
L = min 0.04 m bis max = 1.5 m				
<ul> <li>Connector (for Single-Wire variants</li> </ul>	1839			
with connector)				
Crimp pin for Single-Wire	1700A41			
(Connection Types 1712 and 1714				
<ul> <li>Coaxial cable 0 200 °C Type</li> </ul>	1900A19L			
with M3 connector and Fischer connector				
(L = 0.2/0.4/0.6/0.8/1.0/1.2/1.5/sp)				
<ul> <li>Coaxial cable 0 200 °C with M3</li> </ul>	1650A3P			
connector and MiniCoax connector				
(L = 0.2/0.4/0.6/0.8/1.2)				
<ul> <li>Mounting plate for connector Type 1839</li> </ul>	65005208			
or coaxial cable with Fischer connector				
Accessories (optionally orderable)				
Mounting tools				
• Extraction tool	1358A			
Fixation for Fischer connector	1401			
Socket wrench for mounting for	1300A131			
mounting nut Type 6460A				
Tools for cable exchange	1300A30			
(inkl. fork wrench SW3,5)				
<ul> <li>Dummy sensor 6183DA/DC</li> </ul>	6456A			
Dummy sensor 6183DX/DY	6579			

65001430

5495C...



## Ordering key

